
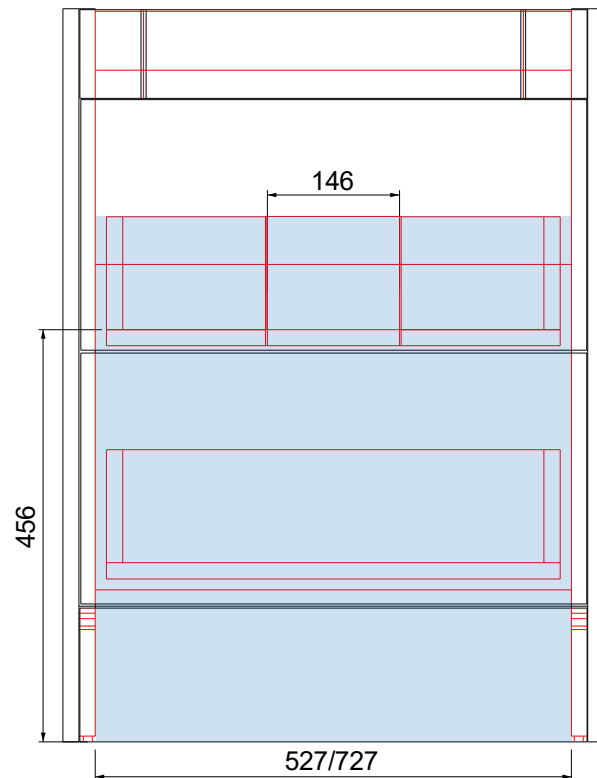


PRODUCT	VANITY CARCASS
UNIT SIZE	600w x 390/460d & 800w x 390/460d x 561h

#### FITTING ADVICE

- The shaded areas indicate the clear voids for the running of services.
- This unit can tilt forward. A secure wall fixing is required.
- To aid installation, it is recommended to remove the drawers to give full access and to avoid damage.
- All wall to carcass and wall to basin joints should be sealed with silicone
- All dimensions

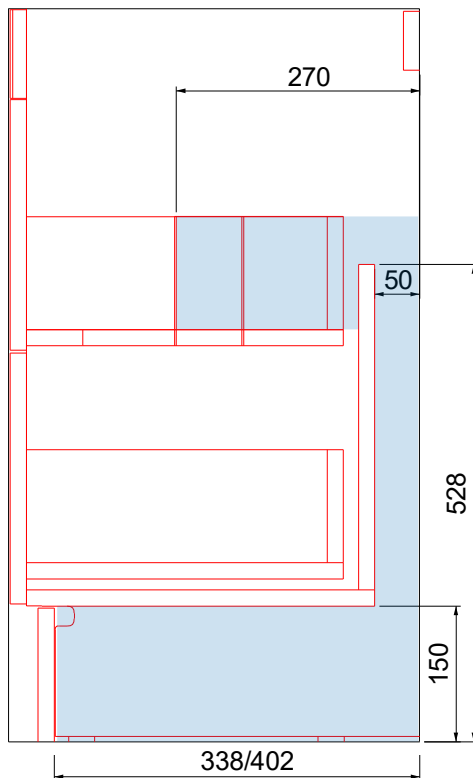

To aid installation, it is recommended to remove the drawers to give full access and to avoid damage.

1. Remove drawers for easy access.
2. Affix wall brackets to the substrate using appropriate fixings.
3. Fit unit to the wall by hanging and then tightening the wall brackets.
4. Fix End Panels to Unit.
5. Fit upper panel and plinth by pushing onto the installed clips.
6. Silicone around the top of the end panels and position basin in place.
7. Refit drawers and fit drawer fascias.

